


# Mailbox Installation Guide

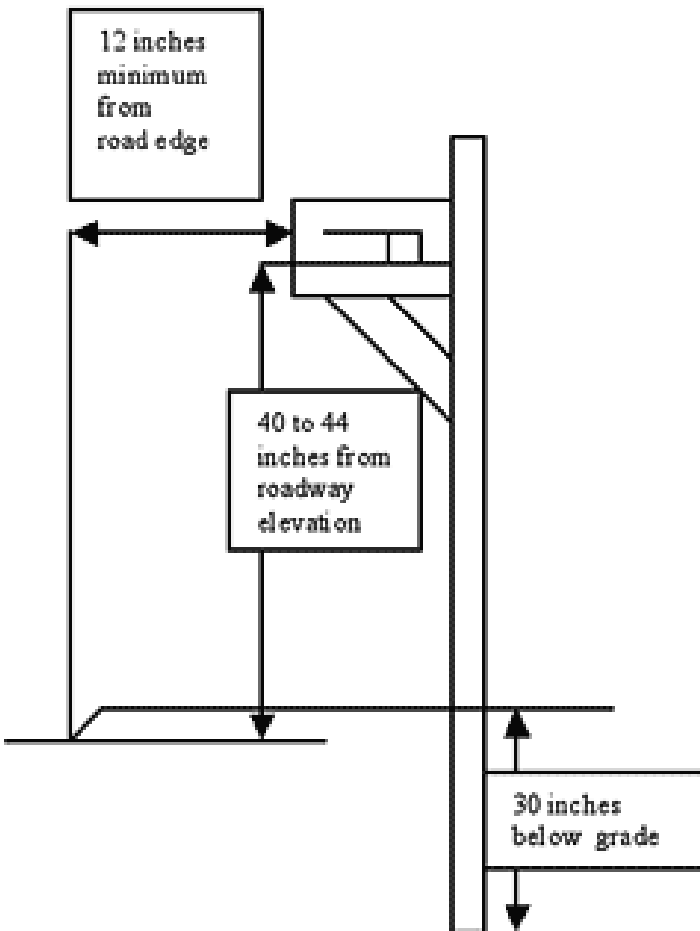

## Mailbox and Post Installation

1. Front of mailbox must be 12 inches minimum 18 inches maximum from curb line or edge of roadway.
2. Bottom of mailbox must be 40 to 44 inches above roadway elevation.
3. Post should be constructed of pressure treated wood, 4 inch by 4 inch minimum post size.

Proper installation and maintenance of your mailbox and post will help to prevent damage during snow removal operations.

THANK YOU